NuIPC cPCIS-2600 Series: 3U CompactPCI Sub-systems User's Guide





©Copyright 2004 ADLINK Technology Inc. All Rights Reserved.

Manual Rev. 1.01, October 22, 2004

Part Number: 50-15019-100

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

NuIPC is a registered trademark of ADLINK Technology Inc.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Getting Service from ADLINK

Customer Satisfaction is top priority for ADLINK TECHNOLOGY INC. If you need any help or service, please contact us.

ADLINK TECHNOLOGY INC.					
Web Site	http://www.adlinktech.com	http://www.adlinktech.com			
Sales & Service	service@adlinktech.com				
TEL	+886-2-82265877	FAX	+886-2-82265717		
Address	9F, No. 166, Jian Yi Road, Chungho City, Taipei, 235 Taiwan				

Please email or FAX your detailed information for prompt, satisfactory, and consistent service.

Detailed Company Ir	nformation		
Company/Organization			
Contact Person			
E-mail Address			
Address			
Country			
TEL		FAX	
Web Site			
Questions			
Product Model			
Environment	OS: Computer Brand: M/B: Chipset: Video Card: NIC: Other:	CPU: BIOS:	
Detail Description			
Suggestions for ADLINK			

Table of Contents

Н	ow t	o Use This Manual	iii
1	Intr	oduction	1
	1.1 1.2 1.3 1.4	Product Definition Mechanical Drawing Configurations Customized Systems	2 3
2	Get	ting Started	5
	2.1 2.2 2.3 2.4 2.5	Shipping Contents	5 9
3	Bad	ckplane	11
	3.1	cBP-3208[R] BackplaneSpecificationsMechanical DrawingPin Assignment	11 12
	3.2	cBP-3213[R] BackplaneSpecifications	18 18 19
	3.3	Pin Assignment	25 25 25
	3.4	Pin AssignmentcBP-3061 Power BackplaneSpecifications	30 30 30
	3.5	cBP-3062 Power Backplane Specifications Mechanical Drawing Pin Assignment	34 34 34

4	Co	oling System	39
	4.1 4.2	Removing and Replacing the Air Filters	
	+.∠ 4.3	Fan Alarm: Fan Removal and Replacement Temperature Alarm	
	+.3 1.4	Fan Specifications	
_	+.→	Mechanical Drawing	
5	Ро	wer Supply Unit	43
Ę	5.1	ATX: Zippy PS2 HG2-6400P	43
		Features	
		Specifications	43
		Input Characteristics	
		Output Characteristics	
Ę	5.2	CompactPCI: cPS-H325/AC	
		Features	
		Specifications	
		Input Characteristics	
		Output Characteristics	46
6	Sp	ecifications	49
6	3.1	Features	49
	5.2	Mechanical	
6	3.3	Environmental	
6	6.4	System Alarm Board	
lm	poi	tant Safety Instructions	51
W	arra	nty Policy	53
,			

How to Use This Manual

This manual is designed to help you use the cPCIS-6230R/6240R 6U CompactPCI Sub-system. It is divided into six chapters:

- Chapter 1: Introduction, gives an overview of the product features.
- **Chapter 2: Getting Started,** describes the unpacking procedure, setup and configuration of the sub-system.
- **Chapter 3: Backplane**, gives a detailed description of the backplanes used in the cPCIS-2600 Series sub-systems.
- **Chapter 4: Cooling System**, describes how to remove and replace the sub-system air filters, fan and temperature alarm conditions and the hot swappable fans used to cool the sub-system.
- **Chapter 5: Power Supply Unit**, describes the PSUs of the cPCIS-2600 Series sub-systems.
- **Chapter 6: Specifications**, describes the sub-system's detailed specifications.

1 Introduction

1.1 Product Definition

The cPCIS-2600 Series subsystems are rack mountable, 4U in height, and designed for 3U CompactPCI cards and modules. They are ideal for industrial or transport applications where small chassis size with multifunctionality are important, and provide maximum cooling efficiency, a guarded power on/off button, ample power capacity, a hot swap backplane and easy maintenance. Their ability to handle a wide range of temperatures and excellent shock and vibration characteristics make them suitable for operating in a rigorous environment. An embedded alarm board monitors temperature & fan status to maximize continuous operation. The cPCIS-2600 Series allows for custom configuration, giving system integrators maximum flexibility to build in specialized functionality.

This user's manual provides unpacking, operating, and maintenance information for the cPCI-2600 series 3U CompactPCI subsystems. The cPCI-2600 series subsystems are assembled using the following components:

Components:

Chassis: cPRK-2600

Power Supply: 3U CompactPCI or ATX PS2 form factor PSU

Backplane: PICMG 2.0 R3.0 Hot Swap compatibility

Cooling: 5 hot swappable, push-in fans with removable air filters


Monitor: 6.4" TFT LCD kit (Optional)






cPCIS-2632R shown


1.2 Mechanical Drawing

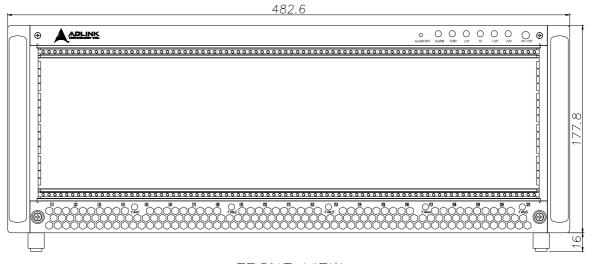

FRONT VIEW

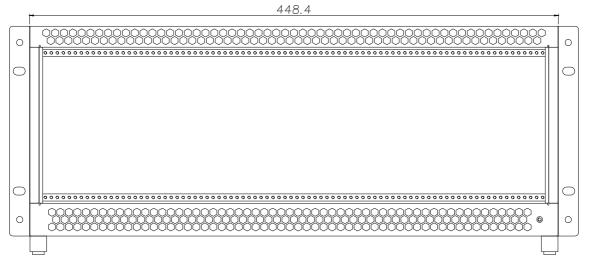

REAR VIEW

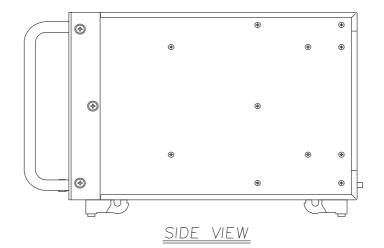

1.3 Configurations

The cPCI-2600 Series comes in the following configurations:

	system slots	peripheral slots	PSU(s)	monitor	PICMG
cPCIS-2630[R]	1	7	400W ATX	_	2.0, 2.1
cPCIS-2631[R]	1	7	250W cPCI	_	2.0, 2.1, 2.11
cPCIS-2632[R]	1	7	250W cPCI (1 + 1)	_	2.0, 2.1, 2.11
cPCIS-2633P[R]	1	12	250W cPCI (2 + 1)	_	2.0, 2.1, 2.11
cPCIS-2642[R] (dual system)	1 x 2	5 x 2	250W cPCI (1 / 1)	_	2.0, 2.1, 2.11
cPCIS-2650[R]	1	7	400W ATX	LCD	2.0, 2.1
cPCIS-2651[R]	1	6	250W cPCI	LCD	2.0, 2.1, 2.11

^{*}All models are available with rear I/O backplanes for Rear Transition Modules (RTMs) and are indicated by an "R" suffix on the model name.

1.4 Customized Systems

Sub-systems can also be customized to meet individual needs. To customize a sub-system please contact an ADLINK dealer. For complete systems, users must order CPU modules in addition to the sub-system.

2 Getting Started

In this chapter, we will describe the unpacking procedure of the sub-system and CompactPCI board and power supply unit (PSU) installation procedures for cPCIS-2600 Series models with CompactPCI PSU(s) only.

2.1 Shipping Contents

Check the shipping carton for any damage. If the shipping carton and contents are damaged, please notify the dealer for a replacement. Retain the shipping carton and packing material for inspection by the dealer. Obtain authorization before returning any product to ADLINK.


Check that the following items are included in the package. If there are any missing items, please contact your dealer:

- One cPCIS-2600 Series sub-system
- This User's Manual
- Power cord (either N. American or European)


2.2 CompactPCI Board & PSU Installation cPCIS-2600 Series models with CompactPCI PSU(s)

The CompactPCI connectors are rigid and require careful handling when inserted and removed. Improper handling of cards can easily damage the backplane.

The PSU slot also has an obvious indicator such as a green card guide rail in a standard CompactPCI chassis (see photo below).

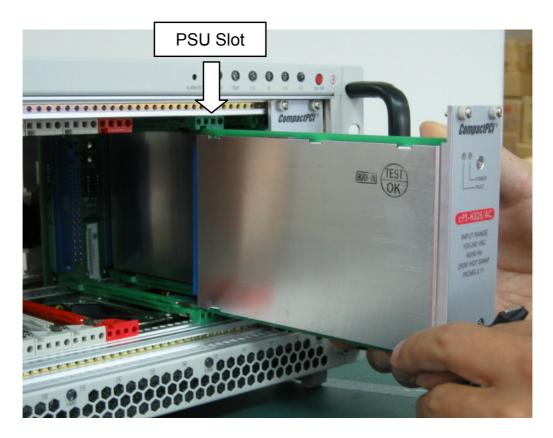

System slots usually have obvious indicators (e.g. red card guide rail, triangle mark enclosing the slot number on the backplane, etc.) System cards can only be installed in a system slot. Do not insert a system card into any other slot, or insert any peripheral card into system slot.

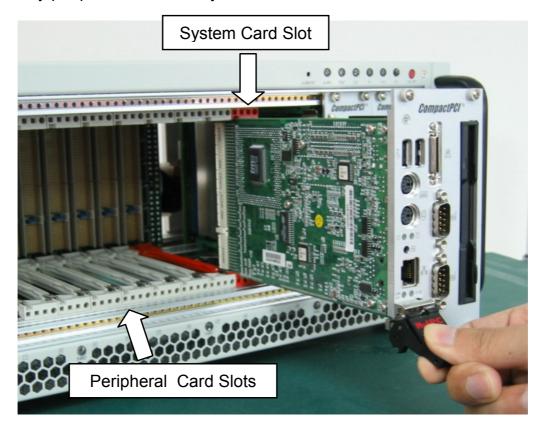


The handle on CompactPCI cards and PSUs ensures simple and safe installation and removal. Please follow the procedures below to install a CompactPCI module into a cPCIS-2600 Series chassis with CompactPCI PSU(s):

CompactPCI Card Installation/Removal Procedure


- 1. Place the sub-system on a level surface or rackmount it. Remove the blanking plates where required by undoing the retaining screws at each end. Retain the blanking plates for possible future use. The system should not be put into use without blanking plates for all empty slots, otherwise the EMC and cooling performance will be compromised
- 2. Hold the SBC module, peripheral card or PSU module vertically. For PSU modules, make sure that the handle is unlatched (i.e. that it is pulled downwards) by first pressing on the locking button with your thumb.




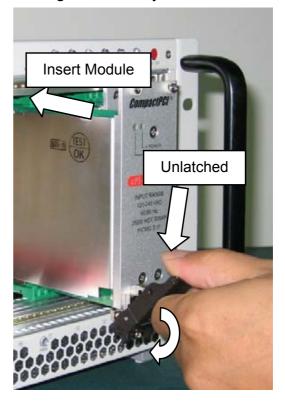

- 3. Carefully insert the module into the desired slot by sliding the edges of the board into the appropriate card guide rail. Take care to ensure correct alignment of the card with the chassis during insertion to prevent damage to the card and/or backplane.
- 4. Continue inserting the card until the handle engages with the chassis.
- 5. Pull upwards on the handle for final insertion. For PSU modules, ensure that the locking button on the handle is fully latched into position.



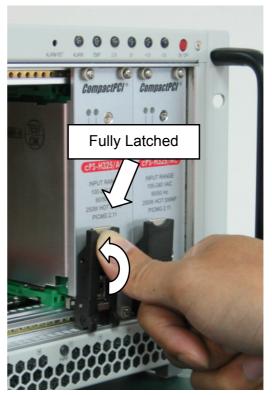

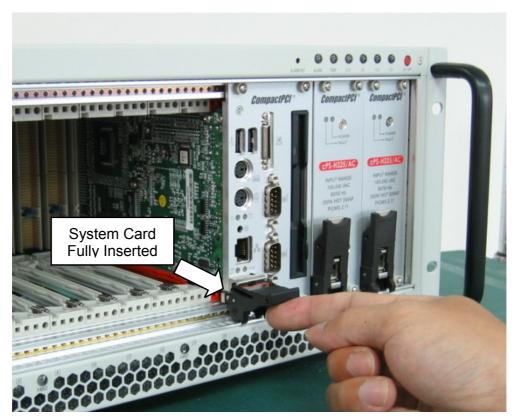

To remove the module, press the release button (if necessary), and reverse steps 1 through 5 above.

2.3 RTM (Rear Transition Module) Installation


The installation and removal procedures for a RTM are the same as those for CompactPCI boards. Because they are shorter than front boards, pay careful attention when inserting or removing RTMs. Only models with an "R" at the end of the model number support RTMs.

Note: We strongly recommended the use of RTMs with AB type connectors to prevent the damage to the backplane during RTM installation.

2.4 Powering Up the System

Connect the supplied power cord to the socket on the back of the chassis. All supplied PSUs are full range 90-240VAC and do not require input voltage setting. Insert a system module into the appropriate card slot.

The cPCIS-2600 Series sub-systems feature a guarded power switch. Use a suitably shaped object (such as a pen) to actuate the power switch. All LEDs will light up to indicate normal operating conditions.

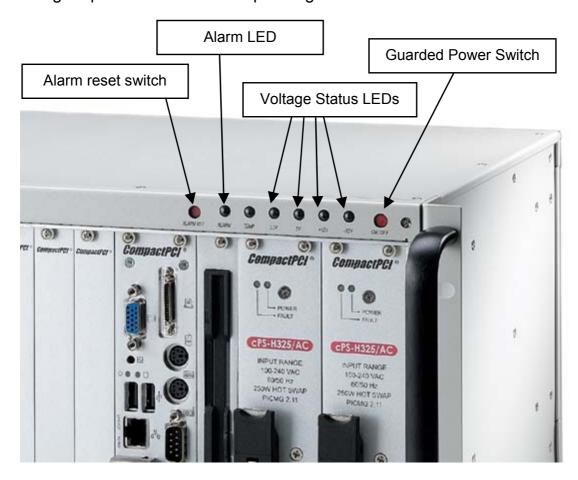

Note: If there are any faults with the power supply, the appropriate Voltage Status LED will turn off to notify the user.

2.5 Optional LCD Monitor

The optional LCD monitor that comes with the cPCIS-2650/1[R] is the Sharp LQ64D343 with VGA format, built-in long life CCFT backlight (50,000 hrs), wide viewing angle (Horizontal: 120° Vertical: 90°), anti glare treatment, high brightness (300 cd/m2), and low reflectance.

Specifications:

Display size: 16 cm [6.4"]

• Dot format (H x V): 640 x 480 dot (RGB)

Dot pitch (H x V): 0.068 x 0.202 mm

Active Area: (H x V) 130.6 x 97.0 mm

Colors: 262,144

Input signal: 6-bit Digital RGB

Viewing Direction 6:00

Backlight Type: 2CCFT(E)

• Brightness: 300 cd/m2

Contrast Ratio: 300 : 1

Power Consumption: 5.57 W

Outer dimensions: (W x H x D) 175.0 x 126.5 x 12.0 mm

Weight: 290 g

Operating Temperature: 0 to +55 °C

Storage Temperature: -25 to +70 °C

3 Backplane

In this chapter, we will describe the backplanes for the cPCIS-2600 Series subsystems. The following table specifies the backplane(s) that correspond to each model.

	backplane	slots	power backplane
cPCIS-2630[R]	cBP-3208[R]	8	_
cPCIS-2631[R]	cBP-3208[R]	8	cBP-3061
cPCIS-2632[R]	cBP-3208[R]	8	cBP-3062A
cPCIS-2633P[R]	cBP-3213[R]	13	
cPCIS-2642[R] (dual system)	cBP-3204[R] (x2)	4 (x2)	cBP-3061 (x2)
cPCIS-2650[R]	cBP-3208[R]	8	
cPCIS-2651[R]	cBP-3208[R]	8	cBP-3061

3.1 cBP-3208[R] Backplane


The cBP-3208[R] is a 3U CompactPCI 32-bit backplane with optional rear I/O (designated by an "R" suffix). It is used by the cPCIS-2630 / 2631 / 2632 / 2650 / 2651[R].

Specifications


- Standard CompactPCI height for 3U cPCI cards
- CompactPCI Compliancy
 - PICMG 2.0 CompactPCI core specification R3.0
 - o PICMG 2.1 CompactPCI hot swap R2.0
- Dimensions: 141.3 x 128.7 mm
- PCI bus clock: up to 32-bit/33MHz

- System Slot: one R-hand side dual-slot
- System Slot Rear I/O: P2 rear I/O with AB-type shroud
- Peripheral slots: 7
- Peripheral Slots Rear I/O: P2 rear I/O with AB-type shroud (optional)
- Power Connectors: ATX connector x2, DC screw terminals
- V (I/O): 3.3V or 5V selectable, default 5V
- Other connectors: INH#, Reset, PWR_FAL#

Mechanical Drawing

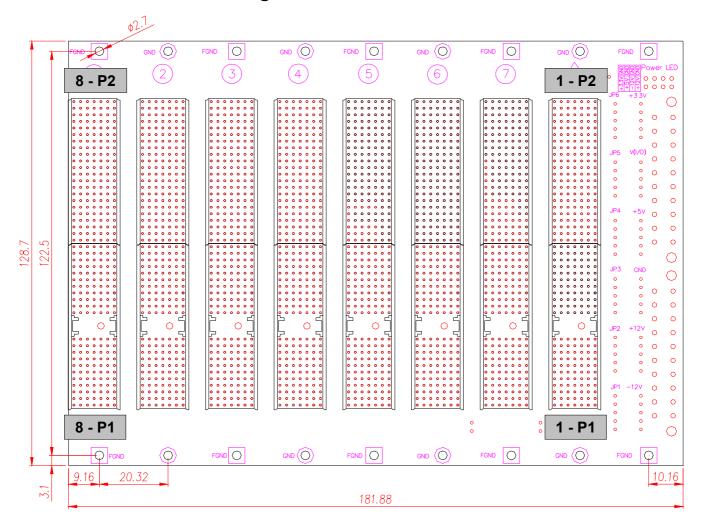

cBP-3208[R] Front View

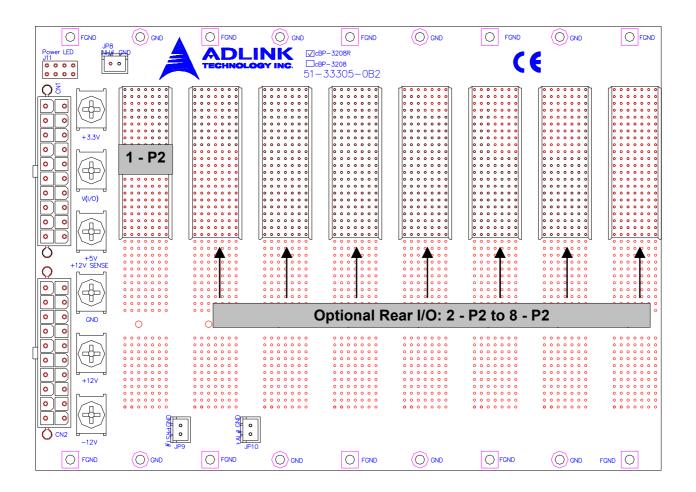

cBP-3208[R] Rear View

Pin Assignment

▶ [1 – P1] System Slot

Pin	Z	Α	В	С	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	BDSEL	TRDY#	GND
12-14				Key			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	Reserved	Reserved	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	Α	В	С	D	E	F

➤ [1 – P2] System Slot

Pin	Z	Α	В	С	D	E	F	
22	GND	GA4	GA3	GA2	GA1	GA0	GND	
21	GND	CLK6	GND	NC	NC	NC	GND	
20	GND	CLK5	GND	NC	NC	NC	GND	
19	GND	GND	GND	NC	NC	NC	GND	
18	GND	NC	NC	NC	NC	NC	GND	
17	GND	NC	NC	PRST#	REQ6#	GNT6#	GND	
16	GND	NC	NC	DEG#	NC	NC	GND	
15	GND	NC	NC	FAL#	REQ5#	GNT5#	GND	
14	GND	NC	NC	NC	NC	NC	GND	
13	GND	NC	NC	NC	NC	NC	GND	
12	GND	NC	NC	NC	NC	NC	GND	
11	GND	NC	NC	NC	NC	NC	GND	
10	GND	NC	NC	NC	NC	NC	GND	
9	GND	NC	NC	NC	NC	NC	GND	
8	GND	NC	NC	NC	NC	NC	GND	
7	GND	NC	NC	NC	NC	NC	GND	
6	GND	NC	NC	NC	NC	NC	GND	
5	GND	NC	NC	NC	NC	NC	GND	
4	GND	V(I/O)	NC	NC	NC	NC	GND	
3	GND	CLK4	GND	GNT3#	REQ4#	GNT4#	GND	
2	GND	CLK2	CLK3	GND	GNT2#	REQ3#	GND	
1	GND	CLK1	GND	REQ1#	GNT1#	REQ2#	GND	
Pin	Z	Α	В	С	D	E	F	

▶ [2 – P1] / [8 – P1] Peripheral Slot

Pin	Z	Α	В	С	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14				Key			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	NC	NC	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	Α	В	С	D	Е	F

Pin	Z	Α	В	С	D	E	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
1-21	GND	NC	NC	NC	NC	NC	GND

> CN1 / CN2 – ATX Power Connector

	1 / 014/	_
1	0000	11
	00	
	000	
	00	

Pin	Signal	Pin	Signal
1	+3.3V	11	+3.3V
2	+3.3V	12	-12V
3	GND	13	GND
4	+5V	14	PS_ON_L
5	GND	15	GND
6	+5V	16	GND
7	GND	17	GND
8	POWER	18	-5V
	GOOD		
9	5V STB	19	+5V
10	+12V	20	+5V

> JP7 - connector



Pin #	Signal Name		
1	+12V		
2	-12V Sense		

> JP8 – connector



Pin#	Signal Name		
1	INH#		
2	GND		

▶ JP9 – connector



Pin#	Signal Name		
1	PRST#		
2	GND		

➤ JP10 – connector



Pin#	Signal Name		
1	FAL#		
2	GND		

▶ JP1- V (I/O), default: +5V



Pin#	Signal Name	Pin#	Signal Name
1	+12V	2	GND
3	-12V	4	GND
5	+3.3V	6	GND
7	+5V	8	GND

3.2 cBP-3213[R] Backplane

The cBP-3213[R] is a 3U CompactPCI 32-bit backplane with optional rear I/O (designated by an "R" suffix). It is used by the cPCIS-2633P[R].

Specifications

- Standard CompactPCI height for 3U cPCI cards
- CompactPCI Compliancy
 - PICMG 2.0 CompactPCI core specification R3.0
 - PICMG 2.1 CompactPCI hot swap R2.0
 - PICMG 2.11 CompactPCI Power Interface
- Dimensions: 425.7 x 128.7 mm
- PCI bus clock: up to 32-bit/33MHz
- System Slot: one R-hand side dual-slot
- System Slot Rear I/O: P2 rear I/O with AB-type shroud
- Peripheral slots: 12 (cBP-R3213 bridge board req'd)
- Peripheral Slots Rear I/O: P2 rear I/O with AB-type shroud (optional)
- Bridge: cBP-R3213 rear bridge board, TI2050 P2P bridge
- Power Socket: PICMG 2.11 47-pin socket x3 (for 8HP power module)
- V (I/O): 3.3V or 5V selectable, default 5V
- Power Connectors: ATX connector x2, DC screw terminals
- Other connectors: INH#, Reset, PWR_FAL#, voltage LEDs

Mechanical Drawing 60 **Optional Rear I/O** <u>ф</u> О V(I/O) +3,3V **O**O 0 **စ**ြံ 0 0 ф (О <u>ф</u> О 0 0 0 **Optional Rear I/O @ Proprietary Slot ©**[0 only on cBP-R3213[R] **6**0 <u>"</u> 0 0 **6**0 0 0 **%** 0 **Optional Rear I/O** 0 0 cBP-3213[R] Rear View cBP-3213[R] Front View

Pin Assignment

> [S21] System Slot

Pin	Z	Α	В	С	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	BDSEL	TRDY#	GND
12-14				Key			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	Reserved	Reserved	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	Α	В	С	D	E	F

> [S7] System Slot

	[O7]	System Slot						
Pin	Z	Α	В	С	D	E	F	
22	GND	GA4	GA3	GA2	GA1	GA0	GND	
21	GND	CLK6	GND	NC	NC	NC	GND	
20	GND	CLK5	GND	NC	NC	NC	GND	
19	GND	GND	GND	NC	NC	NC	GND	
18	GND	NC	NC	NC	NC	NC	GND	
17	GND	NC	NC	PRST#	REQ6#	GNT6#	GND	
16	GND	NC	NC	DEG#	NC	NC	GND	
15	GND	NC	NC	FAL#	REQ5#	GNT5#	GND	
14	GND	NC	NC	NC	NC	NC	GND	
13	GND	NC	NC	NC	NC	NC	GND	
12	GND	NC	NC	NC	NC	NC	GND	
11	GND	NC	NC	NC	NC	NC	GND	
10	GND	NC	NC	NC	NC	NC	GND	
9	GND	NC	NC	NC	NC	NC	GND	
8	GND	NC	NC	NC	NC	NC	GND	
7	GND	NC	NC	NC	NC	NC	GND	
6	GND	NC	NC	NC	NC	NC	GND	
5	GND	NC	NC	NC	NC	NC	GND	
4	GND	V(I/O)	NC	NC	NC	NC	GND	
3	GND	CLK4	GND	GNT3#	REQ4#	GNT4#	GND	
2	GND	CLK2	CLK3	GND	GNT2#	REQ3#	GND	
1	GND	CLK1	GND	REQ1#	GNT1#	REQ2#	GND	
Pin	Z	Α	В	С	D	E	F	

> [S15] – [S20] / [S23] – [S28] Peripheral Slot

	[010] [020] [020]		Chiphicial		Ì		
Pin	Z	Α	В	С	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14				Key			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	NC	NC	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	Α	В	С	D	E	F

▶ [S1] – [S6] / [S9] – [S14] Peripheral Slot

Pin	Z	Α	В	С	D	Е	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
1-21	GND	NC	NC	NC	NC	NC	GND

> CN1 / CN2 / CN3- Modular Power 47P Connector

	0	
47	₽	
	Ò	
	0	
44	000	4 2
	000	2
	000	
23	000	21
20	0 0	19
	O O	
	0 0	
	0 0	
	0 0	
	0 0	
	0 0	
	0 0	
	0 0	
2	್ತಿಂ	1
	0	

/ CN3- Modular Power 4/P Connector								
Pin	Signal	Pin	Signal					
47	ACL/-DC IN	31	GA2					
46	ACN/+DC IN	30	V1 SENSE					
45	CGND	29	V1ADJ					
44	V3 SHARE	28	GA1					
43	IPMB_PWR	27	EN#					
42	+FAL#	26	RESERVED					
41	V2 SHARE	25	GA0					
40	IPMB_SDA	24	RTN					
39	INH#	23	RESERVED					
38	DEG#	22	RTN					
37	IPMB_SCL	21	V4					
36	V3 SENSE	20	V3					
35	V1 SHARE	19	RTN					
34	S RTN	13-18	V2					
33	V2 SENSE	5-12	RTN					
32	V2ADJ	1-4	V1					
	Pin 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33	Pin Signal 47 ACL/-DC IN 46 ACN/+DC IN 45 CGND 44 V3 SHARE 43 IPMB_PWR 42 +FAL# 41 V2 SHARE 40 IPMB_SDA 39 INH# 38 DEG# 37 IPMB_SCL 36 V3 SENSE 35 V1 SHARE 34 S RTN 33 V2 SENSE	Pin Signal Pin 47 ACL/-DC IN 31 46 ACN/+DC IN 30 45 CGND 29 44 V3 SHARE 28 43 IPMB_PWR 27 42 +FAL# 26 41 V2 SHARE 25 40 IPMB_SDA 24 39 INH# 23 38 DEG# 22 37 IPMB_SCL 21 36 V3 SENSE 20 35 V1 SHARE 19 34 S RTN 13-18 33 V2 SENSE 5-12					

> CN5 / CN6 – ATX Power Connector

A I OWEI COIIICEIOI						
Pin	Signal	Pin	Signal			
1	+3.3V	11	+3.3V			
2	+3.3V	12	-12V			
3	GND	13	GND			
4	+5V	14	PS_ON_L			
5	GND	15	GND			
6	+5V	16	GND			
7	GND	17	GND			
8	POWER	18	-5V			
	GOOD					
9	5V STB	19	+5V			
10	+12V	20	+5V			

➤ JP3 – connector



Pin#	Signal Name			
1	INH#			
2	-12V Sense			

➤ JP2 – connector



Pin#	Signal Name
1	FAL#
2	GND

> JP1 – connector



Pin#	Signal Name
1	PRST#
2	GND


3.3 cBP-3204[R] Backplane

The cBP-3204[R] is a 3U CompactPCI 32-bit backplane with optional rear I/O (designated by an "R" suffix). The cPCIS-2642[R] uses two of these backplanes.


Specifications

- Standard CompactPCI height for 3U cPCI cards
- CompactPCI Compliancy
 - PICMG 2.0 CompactPCI core specification R3.0
 - PICMG 2.1 CompactPCI hot swap R2.0
- Dimensions: 100.7 x 128.7 mm
- PCI bus clock: up to 32-bit/33MHz
- System Slot: one R-hand side dual-slot
- System Slot Rear I/O: P2 rear I/O with AB-type shroud
- Peripheral slots: 3
- Peripheral Slots Rear I/O: P2 rear I/O with AB-type shroud (optional)
- Power Connectors: ATX connector x2, DC screw terminals
- V (I/O): 3.3V or 5V selectable, default 5V
- Other connectors: INH#, Reset, PWR_FAL#

Mechanical Drawing

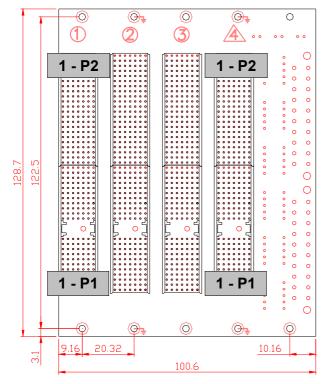

cBP-3204[R] Front View

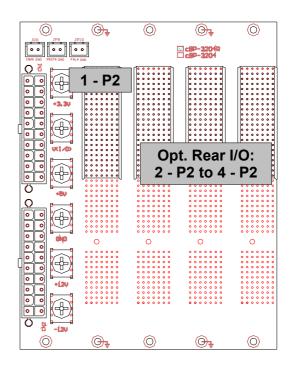

cBP-3204[R] Rear View

Pin Assignment

▶ [1 – P1] System Slot

Pin	Z	Α	В	С	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	BDSEL	TRDY#	GND
12-14				Key			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	Reserved	Reserved	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	Α	В	С	D	E	F

Pin	Z	Α	В	С	D	E	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
21	GND	CLK6	GND	NC	NC	NC	GND
20	GND	CLK5	GND	NC	NC	NC	GND
19	GND	GND	GND	NC	NC	NC	GND
18	GND	NC	NC	NC	NC	NC	GND
17	GND	NC	NC	PRST#	REQ6#	GNT6#	GND
16	GND	NC	NC	DEG#	NC	NC	GND
15	GND	NC	NC	FAL#	REQ5#	GNT5#	GND
14	GND	NC	NC	NC	NC	NC	GND
13	GND	NC	NC	NC	NC	NC	GND
12	GND	NC	NC	NC	NC	NC	GND
11	GND	NC	NC	NC	NC	NC	GND
10	GND	NC	NC	NC	NC	NC	GND
9	GND	NC	NC	NC	NC	NC	GND
8	GND	NC	NC	NC	NC	NC	GND
7	GND	NC	NC	NC	NC	NC	GND
6	GND	NC	NC	NC	NC	NC	GND
5	GND	NC	NC	NC	NC	NC	GND
4	GND	V(I/O)	NC	NC	NC	NC	GND
3	GND	CLK4	GND	GNT3#	REQ4#	GNT4#	GND
2	GND	CLK2	CLK3	GND	GNT2#	REQ3#	GND
1	GND	CLK1	GND	REQ1#	GNT1#	REQ2#	GND
Pin	Z	Α	В	С	D	E	F

Pin	Z	Α	В	С	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14				Key			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	NC	NC	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	Α	В	С	D	E	F

▶ [2 – P2] – [4 – P2] Peripheral Slot

Pin	Z	Α	В	С	D	E	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
1-21	GND	NC	NC	NC	NC	NC	GND

> CN5 / CN6 – ATX Power Connector

1	00 11	

Pin	Signal	Pin	Signal
1	+3.3V	11	+3.3V
2	+3.3V	12	-12V
3	GND	13	GND
4	+5V	14	PS_ON_L
5	GND	15	GND
6	+5V	16	GND
7	GND	17	GND
8	POWER GOOD	18	-5V
9	5V STB	19	+5V
10	+12V	20	+5V

> JP8 – connector



Pin #	Signal Name
1	INH#
2	-12V Sense

> JP9 – connector



Pin#	Signal Name
1	PRST#
2	GND

> JP10 – connector



Pin#	Signal Name
1	FAL#
2	GND


3.4 cBP-3061 Power Backplane

The cBP-3061 is a PICMG 2.11 CompactPCI 3U 47-pin power backplane for one power module. It is used by the cPCIS-2631/2642[R].


Specifications

- CompactPCI Compliancy: PICMG 2.11 CompactPCI Power Interface
- Dimensions: 40.64x 128.7 mm
- Power Module Sockets: one
- AC/DC input screw terminal: yes
- DC output (ATX connector): one
- Cascading voltage Sense: Built-in ATX connector
- INH#/FAL#/DEG# Distribution: Built-in ATX connector

Mechanical Drawing

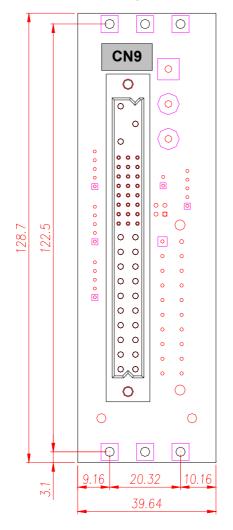



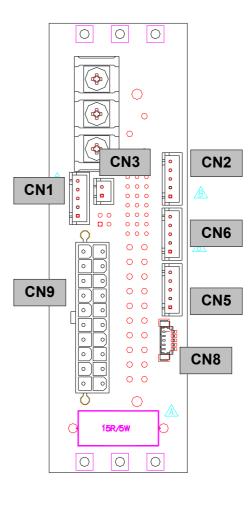

cBP-3061 [R] Rear View

Pin Assignment

CN1 – Power Sense Connector



Pin#	Signal Name
1	V1_Sense
2	GND_S
3	V2_Sense
4	V3_Sense
5	NC

➤ CN2 – Power Sense Connector



Pin#	Signal Name
1	V1_Sense
2	GND_S
3	V2_Sense
4	V3_Sense
5	NC

➤ CN3 – connector



Pin#	Signal Name
1	INHJ
2	GND

➤ CN4 – Modular Power 47P Connector

21 19

	0	
47	P	
	o	
	0	
44	6 6 6	
	000	
	000	
23	000	
20	00	
20	o o	
	0 0	
	0 0	
	0 0	
	0 0	
	O O	
	0 0	
	0 0	
2	್ತ	
	0	

O	ower 4/P Connector			
	Pin	Signal	Pin	Signal
	47	ACL/-DC IN	31	GA2
	46	ACN/+DC IN	30	V1 SENSE
	45	CGND	29	V1ADJ
	44	V3 SHARE	28	GA1
	43	IPMB_PWR	27	EN#
	42	+FAL#	26	RESERVED
	41	V2 SHARE	25	GA0
	40	IPMB_SDA	24	RTN
	39	INH#	23	RESERVED
	38	DEG#	22	RTN
	37	IPMB_SCL	21	V4
	36	V3 SENSE	20	V3
	35	V1 SHARE	19	RTN
	34	S RTN	13-18	V2
	33	V2 SENSE	5-12	RTN
	32	V2ADJ	1-4	V1

➤ CN5 – Current Share Connector



Pin #	Signal Name
1	V1_Share
2	GND
3	V2_Share
4	V3_Share
5	NC

➤ CN6 – Current Share Connector



Pin #	Signal Name
1	V1_Share
2	GND
3	V2_Share
4	V3_Share
5	NC

➤ CN8 – IPMB Connector

1

Pin#	Signal Name
1	IPMB_SCL
2	GND
3	IPMB_SDA
4	IPMB_PWR
5	ALERT

➤ CN9 – ATX Power Connector

	1
00	

Pin	Signal	Pin	Signal
1	+3.3V	11	+3.3V
2	+3.3V	12	-12V
3	GND	13	GND
4	+5V	14	PS_ON_L
5	GND	15	GND
6	+5V	16	GND
7	GND	17	GND
8	POWER GOOD	18	-5V
9	5V STB	19	+5V
10	+12V	20	+5V


3.5 cBP-3062 Power Backplane

The cBP-3061 is a PICMG 2.11 CompactPCI 3U 47-pin power backplane for two power modules. It is used by the cPCIS-2632[R].


Specifications

- CompactPCI Compliancy: PICMG 2.11 CompactPCI Power Interface
- Dimensions: 40.64x 128.7 mm
- Power Module Sockets: two
- AC/DC input screw terminal: yes
- DC output (ATX connector): two
- Cascading Current Sharing: yes
- Cascading Voltage Sense: Built-in ATX connector
- INH#/FAL#/DEG# Distribution: Selectable common INH#/FAL#/DEG# or separated INH# for each power module, dedicated connector
- PICMG 2.0 IPMB Socket: yes

Mechanical Drawing

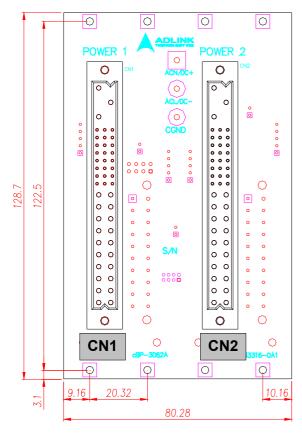

cBP-3062[R] Front View

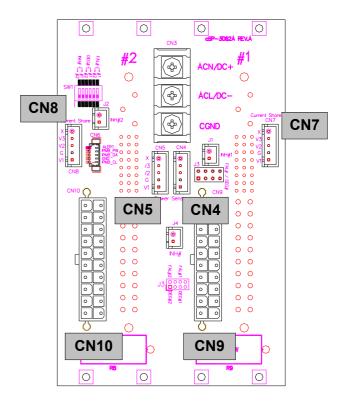

cBP-3062[R] Rear View


Pin Assignment

CN1 / CN2 – Modular Power 47P Connector

	0
47	P
	0
	0
44	0 0 0 0 0 0
	0 0 0 0 0 0 0 0 0
23	8 8 8
20	
	O O
	0 0
	0 0
	0 0
	0 0
	0 0
	0 0
	0 0
2	العروا
	0


1410	Moddiai i owei 471 Connector				
	Pin	Signal	Pin	Signal	
	47	ACL/-DC IN	31	GA2	
	46	ACN/+DC IN	30	V1 SENSE	
	45	CGND	29	V1ADJ	
	44	V3 SHARE	28	GA1	
4 2	43	IPMB_PWR	27	EN#	
2	42	+FAL#	26	RESERVED	
	41	V2 SHARE	25	GA0	
21	40	IPMB_SDA	24	RTN	
19	39	INH#	23	RESERVED	
	38	DEG#	22	RTN	
	37	IPMB_SCL	21	V4	
	36	V3 SENSE	20	V3	
	35	V1 SHARE	19	RTN	
	34	S RTN	13-18	V2	
	33	V2 SENSE	5-12	RTN	
	32	V2ADJ	1-4	V1	
1 '					

➤ CN4 – Power Sense Connector



Pin #	Signal Name
1	V1_Sense
2	GND_S
3	V2_Sense
4	V3_Sense
5	NC

CN5 – Power Sense Connector



Pin#	Signal Name
1	V1_Sense
2	GND_S
3	V2_Sense
4	V3_Sense
5	NC

CN6 –Connector

1

Pin#	Signal Name
1	IPMB_SCL
2	GND
3	IPMB_DA
4	IPMB_PWR
5	ALERT

CN7 – Current Share Connector




Pin#	Signal Name
1	V1CS
2	GND_S
3	V2 CS
4	V3 CS
5	NC

> CN8 – Current Share Connector



Pin#	Signal Name
1	V1 CS
2	GND_S
3	V2 CS
4	V3 CS
5	NC

➤ CN9 / CN10 – ATX Power Connector



Pin	Signal	Pin	Signal
1	+3.3V	11	+3.3V
2	+3.3V	12	-12V
3	GND	13	GND
4	+5V	14	PS_ON_L
5	GND	15	GND
6	+5V	16	GND
7	GND	17	GND
8	POWER	18	-5V
	GOOD		
9	5V STB	19	+5V
10	+12V	20	+5V

> JP1 – connector

	Ŧ
∏) ≭ (∘	Γ
1	


Pin#	Signal Name
1	INH#2
2	GND

> JP2 – connector



Pin#	Signal Name
1	INH#1
2	GND

➤ JP3 – connector



Pin#	Signal Name		
1	DEG#1		
2	FAL#1		
3	RSV23A		
4	RSV26A		
5	DEG#2		
6	FAL#2		
7	RSV23B		
8	RSV26B		

> JP4 – connector



Pin#	Signal Name
1	INH#
2	GND

4 Cooling System

The cPCIS-2600 Series subsystems with CompactPCI PSUs are equipped five front-access hot swappable low noise fans on the bottom of the chassis to provide an effectively cooled environment. The fans are push-in and ventilate out the rear of the chassis. The chassis is equipped with air filters that are removable for cleaning and replacement. An embedded alarm board monitors fan status and initiates a visible and audible alarm upon fan failure.

4.1 Removing and Replacing the Air Filters cPCIS-2600 Series models with CompactPCI PSU(s)


To ensure proper performance, the air filters of cPCIS-2600 Series subsystems with CompactPCI PSUs should be cleaned or replaced as necessary. Replacement air filters are supplied and can be found in the Accessory Packet.

Air Filter Removal and Replacement Procedure

1. Remove the screws attaching the front filter cover at the base of the chassis (2 screws) and remove the cover.



- 2. After cleaning or replacing the filter, place it back in position and reattach the filter cover.
- 3. Remove the screws attaching the bottom filter cover on the bottom of the chassis (6 screws see diagram below).

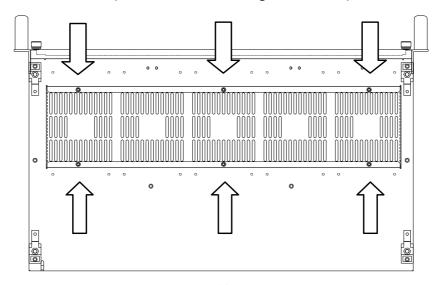

BOTTOM VIEW




4. After cleaning or replacing the filter, place it back in position and reattach the filter cover.

4.2 Fan Alarm: Fan Removal and Replacement

The embedded alarm board monitors temperature & fan status. Should a fan become disabled, the Alarm LED will light up and an audible warning will be heard. The LED corresponding to the faulty fan will flash, indicating which fan needs to be replaced.

To disable the audible warning, press the Alarm RST button. The Alarm LED will continue to flash until the faulty fan is replaced.

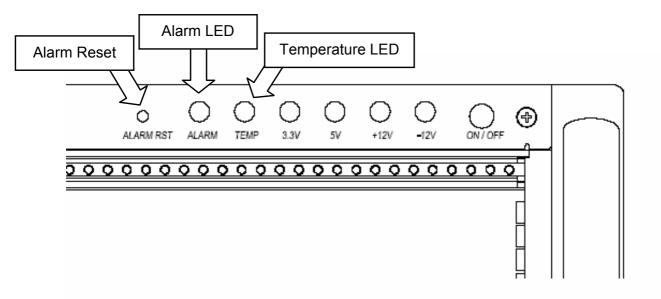

Fan Removal and Installation Procedure (cPCI PSU models)

- Remove the screws attaching the front filter cover at the base of the chassis (2 screws) and remove the cover (see Air Filter Removal and Replacement Procedure above).
- 2. Pull the faulty fan module out of the fan tray and replace with a functional fan.





3. Reverse steps 1-2 to replace the filter cover.

For replacement fan modules, please contact your ADLINK distributor.

4.3 Temperature Alarm

When the subsystem's internal temperature exceeds 50°C, the TEMP LED will flash and an audible warning will be heard. To reset the alarm and disable the audible warning, press the Alarm RST button.

In order to protect the system from damage resulting from overheating, it should be shut down immediately. Inspect the operating environment for causes of the overheating condition. After the system has cooled down sufficiently, power it up and be observant of any future temperature alarm conditions.

4.4 Fan Specifications

Model: SUNON KD1208PHB3-A (H.F).

• Dimensions: 80 x 80 x 15mm.

Weight: 71kgw.

Type: 12VDC brush-less with ball bearing motor.

Rated voltage: 12V @ 0.12A.


Rated power: 1.4W each.

Fan speed: 2500RPM.

Maximum Air flow: 26CFM each (when zero static pressure).

Noise: 32dBA each.

Mechanical Drawing

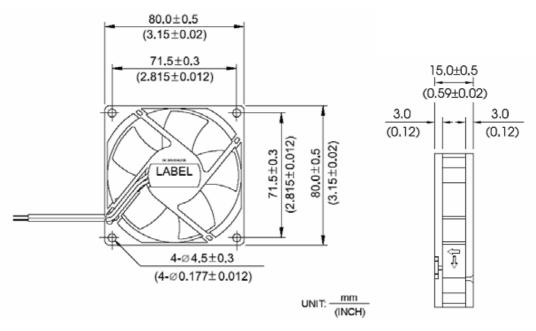

5 Power Supply Unit

The cPCIS-2600 Series subsystems are equipped with either the Zippy Technology Corp. PS2 HG2-6400P industrial grade ATX power supply or ADLINK's cPS-H325/AC CompactPCI power module (see Section 1.3 Configurations).

5.1 ATX: Zippy PS2 HG2-6400P

Features

- Active PFC (full range)
- 12V Max. Current: 30A
- Noise & Thermal Control

Specifications

- Operating Temperature Range: -10°C 40°C
- Cooling: one 80mm DC fan
- Active Power Factor Correction meets IEC-1000-3-2 CLASS D
- Dimensions: 140.00x150.00x86.00 (mm)
- Hold Up Time: 16 ms minimum at full load & normal input voltage
- Dielectric Withstand: input / output 1500 VAC for 1 second input to frame ground 1500 VAC for 1 second
- Efficiency: 68% typical
- Power Good Signal: on delay 100 ms to 500 ms, off delay 1 ms
- Over Load Protection: 130 +/- 20%
- Over Voltage Protection:

$$5V \rightarrow 5.7V - 6.5V$$
; $3.3V \rightarrow 3.9 - 4.3V$; $12V \rightarrow 13.6 - 15V$

- Short Circuit Protection: +5V, -5V, +12V, -12V, +3.3V
- EMI Noise Filter: FCC CLASS B, CISPR22 CLASS B
- Safety: UL 1950, CSA 22.2 NO/ 950, TUV IEC 950
- MTBF: 102,391

Input Characteristics

• Voltage: 90 – 240 VAC Full Range

• Frequency: 47 ~ 63 HZ

• Input Current: 8.0 A (RMS) FOR 115 VAC

4.0 A (RMS) FOR 230 VAC

• Inrush Current: 65A MAX. FOR 115 VAC

125A MAX. FOR 230 VAC

Output Characteristics

	Output Current(A)		Regulation		Output	
Output Voltage	MIN.	MAX.	PEAK	LOAD	LINE	Ripple& Noise Max[P-P]
5V	3	35	_	± 5%	± 1%	50mV
12V	2	30	_	+75%	± 1%	120mV
-5V	0	0.8	_	± 5%	± 1%	150mV
-12V	0	1.0	_	± 5%	± 1%	150mV
3.3V	1	25	_	± 5%	± 1%	50mV
+5VSB	0.1	2	_	± 5%	± 1%	50mV

Note: The output current of 5V & 3.3V must not exceed 45A.

5.2 CompactPCI: cPS-H325/AC

Features

- 250W 3U X 8HP Eurocard package
- Meets IEC1000-3-2 harmonic correction
- Internal OR-ing diodes for N+1 redundancy
- Hot-swappable
- Third-wire current sharing
- EMI meets EN 55022 / FCC CLASS A
- CE marking compliance
- Fully compliant with PICMG

Specifications

- Operating Temperature Range: 0 °C to 50°C
- Storage Temperature: -40 to +85 °C
- Temperature Coefficient: Typ. ±0.02% / °C
- Cooling: >20 CFM moving air required to achieve full rated power
- Dimensions: Eurocard 3U X 8HP X 160mm CompactPCI format
- Efficiency: 78-79% typical
- Switching Frequency: 120K Hz
- Safety: IEC60950 Class I
- Circuit Topology: Forward circuit
- Transient Response: Peak transient less than 100mV and recovers within 2mS after 25% load-change

Input Characteristics

- Input Voltage: Typ. 90-264VAC
- Power Factor Correction: Meets Harmonic Correction IEC1000-3-2.
 Power Factor typ. 0.95-0.97
- Input Connector: Positronic 47-pin PCIH47M400A1
- Input Frequency: 47-63Hz
- Inrush Current: Less than 30A @ 230VAC
- Input Current: 2.8A @115VAC / 1.4A @230VAC

- Dielectric Withstand: Meets IEC950 regulation
- EMI: Meets EN55022 / FCC Class A
- Hold-up Time: 5mS after power fail signal
- Remote ON/OFF: Available at [INH#] & [EN#] pins
- Power Fail Signal: Available at [FAL#] pin
- Status LED: <Green> means valid input voltage; <Amber> means a critical fault.
- Thermal Protection (OTP): Installed NTC and thermostat for thermal sensor at [DEG#] pin
- Power OK: Installed at all outputs
- Leakage Current: Typ. 0.5mA

Output Characteristics

	Output Current (A)				
Output Voltage	MIN.	MAX.	TYP.	PEAK.	
5V					
MAIN +VO1	2.0	33.0	25.0	_	
@ ★ # ≡ ⊙					
3.3V					
AUX. +VO2	0	33	18	_	
▲ @ ★ # ≡ ⊙					
12V					
AUX. +VO3	0	5.5	5.5	6	
▲ ≡ # ⊙ ★ @					
-12V					
AUX. –VO4	0	1	0.5	1.5	
• ⊙ ★ ■ =					

Symbol: "★" OVP built-in; "@" Adjustable; "#" Remote sensing; "≡" 3rd-wire Load Sharing; "=" Droop Current Sharing; "⊙" Installed with Or-ing diode; "▲" Magnetic Amplifier; "•" Installed with Post-regulator; "•" Common Choke.

Remarks: Peak load sustainable for less than 60sec. with duty cycle <10%. Max. load is the continuous operating load of each rail. Max. load of each rail cannot be drawn from all outputs at the same time.

- Over Load Protection: Fully protected against output overload or short circuit. Typical 120% max. load.
- Over Current Protection: Installed at each rail
- Output Wattage: Typ. 250W continuous.
- Output Connector: Positronic 47-pin PCIH47M400A1.
- Line Regulation: Typ. 0.1%.
- Load Regulation: Typ. ±1–2%.
- Noise & Ripple: Typ. 1% peak to peak or 50mV, whichever is greater.
- OVP: Built-in at all outputs.
- Adjustability: Available at VO1, 2 & 3.
- Output Trim: Electrical trim available at VO1/VO2 [ADJ #].
- Remote Sensing: Available at VO1, VO2 & VO3.
- Hot-Swap: Available.
- N+1 Redundancy: Installed with internal OR-ing diodes at all outputs for N+1 redundancy operation.
- Current Sharing: Third-wire current sharing at VO1,2 &3.
- Power OK Signal: Available for all output.
- Over Current Protection: Installed at each rail.
- Overload Protection: Fully protected against output overload or short circuit. Typical 120% max. load.

6 Specifications

6.1 Features

- Standard 19" Rack-mount 3U CompactPCI form factor (4U height).
- Board Space:
 - Supports both front and rear access for I/O, CPU, and power supply.
 - Standard 3U, 21-slot width chassis.
- Five front-access hot swappable fans with removable air filter for self-cooling.
- Suitable for both rack-mount and desktop applications.
- Side handles for portability.
- Built-in alarm module to monitor chassis temperature and fan status.
- Comprehensive EMC shielding [EMC gaskets are installed on front rails (top and bottom), rear rails, and side panels].
- Impact resistant power switch.
- Power status LEDs to easily monitor power status (+12V,-12V,+5V,+3.3V).

6.2 Mechanical

- CompactPCI Standard: 2.0 R3.0.
- Form Factor: 3U CompactPCI with 50mm depth rear I/O.
- Enclosure: 19" 4U height rack-mount enclosure
 - Coated metal plate outer covering.
 - Guarded power switch and reset button.
- Dimensions: 448.4mm (W) x 177.8mm (H) x 258mm (D). Width with rack-mounting kit is 482.6mm (19").
- Usable width: 21 slots (84HP).


6.3 Environmental

- Operating Temperature: 0 to 50°C (40°C for ATX PSU models)
- Storage Temperature: -20 to 80°C.
- Humidity: 5% 95%, non-condensed.
- Shock: 15G peak-to-peak, 11ms duration, non-operation.
- Vibration:
 - o Non-operation:1.88Grms, 5 500Hz, each axis.
 - o Operation: 0.5Grms, 5 500Hz, each axis.

6.4 System Alarm Board

- Supports fault alarm for up to 8 fans. If any fan faults, the ALARM LED will flash and an audible alarm will sound
- Can detect temperature at two different locations.
- Trigger temperature for each sensor can be set independently (50°C, 60°C, 70°C).
- Alarm mute
- LED indicators for fan and temperature status

Mechanical Drawing

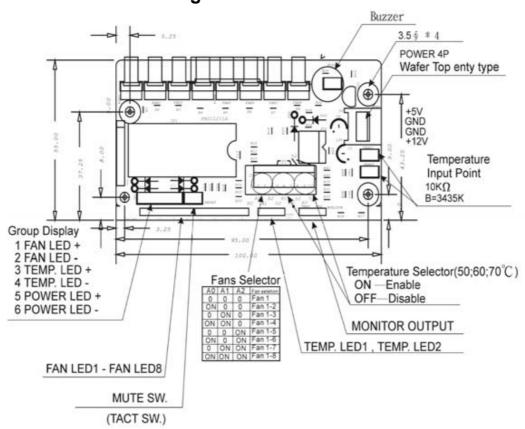

Important Safety Instructions

Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.

- Please read these safety instructions carefully.
- Please keep this User's Manual for later reference.
- The equipment can be operated at an ambient temperature of 50°C.
- The equipment should be operated only from the type of power source indicated on the rating label. Make sure the voltage of the power source when connect the equipment to the power outlet.
- If your equipment has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- For pluggable equipment, that the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- If the equipment is not use for long time, disconnect the equipment from mains to avoid being damaged by transient overvoltage.
- All cautions and warnings on the equipment should be noted.
- Please keep this equipment from humidity.
- Do not use this equipment near water or a heat source.
- Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
- Never pour any liquid into opening; this could cause fire or electrical shock.
- Openings in the case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space around the system for ventilation when you set up your work area. Never insert objects of any kind into the ventilation openings.
- To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before removing covers.

Lithium Battery provided (real time clock battery)

"CAUTION – Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions"

- If one of the following situations arises, get the equipment checked by a service personnel:
 - A. The power cord or plug is damaged.
 - B. Liquid has penetrated into the equipment.
 - C. The equipment has been exposed to moisture.
 - D. The equipment has not work well or you can not get it work according to user's manual.
 - E. The equipment has dropped and damaged.
 - F. If the equipment has obvious sign of breakage.

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the aftersales services we offer, please read the following carefully.

- 1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: http://rma.adlinktech.com/policy/.
- 2. All ADLINK products come with a two-year guarantee
 - The warranty period starts from the product's shipment date from ADLINK's factory.
 - Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
 - For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for loss of data.
 - Please ensure the use of properly licensed software with our systems.
 ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
 - For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.
- 3. Our repair service is not covered by ADLINK's two-year guarantee in the following situations:
 - Damage caused by not following instructions in the user's manual.
 - Damage caused by carelessness on the user's part during product transportation.
 - Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
 - Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals).
 - Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
 - Damage from improper repair by unauthorized technicians.
 - Products with altered and/or damaged serial numbers are not entitled to our service
 - Other categories not protected under our warranty.
- 4. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
- 5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: http://rma.adlinktech.com/policy. Damaged products with attached RMA forms receive priority.

If you have any further questions, please email our FAE staff: service@adlinktech.com.